MAGICSHINE

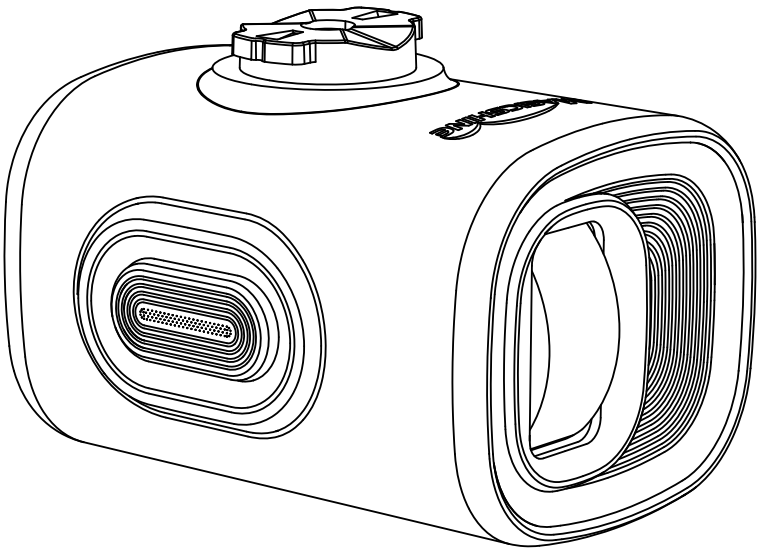

APP PAIRING NAME:
M1-B0 VTG_1000

VTG 1000

USER MANUAL

APP INSTRUCTIONS

Scan the QR code and select the corresponding store link to download the Magicshine App.

App Download

App Manual

⚠ WARNING!

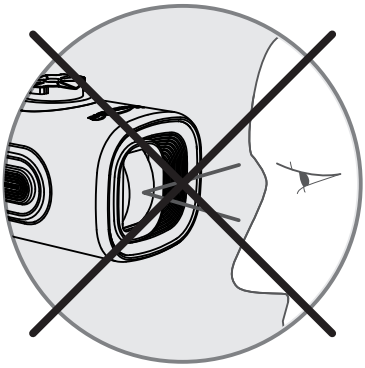

1. To prevent inadvertent switching on, please keep the light unit and wireless remote in lockout mode before transport or storage.
2. DO NOT disassemble, modify, remanufacture, puncture, or damage the device or batteries.

IN THE BOX

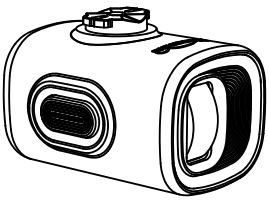

VTG 1000

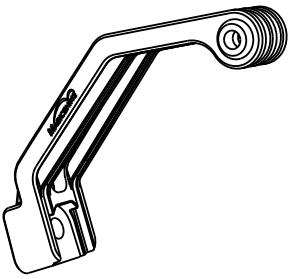

Front fork mount

GoPro adapter

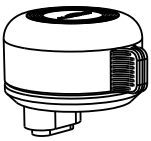

MJ-6561
remote control



Screw

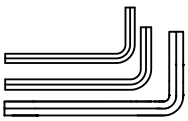

2.5mm/3mm
/5mm
hex key



USB-C
charging cable

LIGHT BUTTON INSTRUCTIONS

ON/OFF: Press and hold the button for 1 second to turn the light on/off.

ADJUST BRIGHTNESS: When the light is on, click the button to change brightness level. The output brightness will cycle through Low→Medium→High →Low...

CHANGE MODE: When the light is on, double click the button to change modes, and the light will cycle through Main light → Main light and DRL → DRL → Main light ...(Note: Night flash and Day flash are only accessible using the wireless remote.)

LOCKOUT: When the light is off, press and hold the button for 3 seconds to enter lockout mode.

UNLOCK: In lockout mode, press and hold the button for 3 seconds or recharge the light.

MEMORY FUNCTION:

When the light is turned on again, it will automatically turn to the last selected lighting mode.

LOW POWER MODE: When the remaining battery power is below 10%, the indicator flashes red, and the light turns to the Low setting of main light or DRL mode and cannot be adjusted. Please charge the light as soon as possible.

REMOTE CONTROL INSTRUCTIONS

LOCKOUT: Slide the remote control in any direction for 5 seconds to enter lockout mode, and the indicator will flash red quickly for 3 seconds.

UNLOCK: In lockout mode, slide the remote control

in any direction and hold for 5 seconds, and the indicator is constantly green for 3 seconds. Alternatively, recharge the remote control to automatically unlock.

REMOTE CONTROL PAIRING

PAIR WITH A FRONT LIGHT: Turn on the light, slide the remote to one side, then quickly slide it to the other side and hold for 10 seconds, until the indicator flashes blue to enter pairing mode. Then, hold the remote close to the light button until the indicator on the light unit flashes blue. Slide the remote in any direction, and the indicators on the remote and light unit are constantly blue for 2 seconds, confirming a successful pairing.

PAIR WITH A FRONT AND TAIL LIGHT: Turn on the front and tail lights, slide the remote to one side, then quickly slide it to the other side and hold for 10 seconds, until the indicator flashes blue to enter pairing mode. Then, hold the remote close to the front and tail lights until the indicators on the remote and the two light units are constantly blue for 2 seconds, confirming a successful pairing. (Note: The front and tail lights to be paired should support the FTR LightSync Control function, and the remote control cannot be paired separately with a tail light.)

CLEAR PAIRING: When the front light is off, single click the button and then long press for 10 seconds until the indicator on the light unit flashes blue for 3 seconds, and the pairing is cleared successfully.

REMOTE CONTROL OPERATION

ON/OFF: Slide to either side and hold for 1 second

ADJUST BRIGHTNESS: Quickly slide to the right once

CHANGE MODE: Quickly slide to the right twice

FLASH MODE: Quickly slide to the left twice

FULL OUTPUT MODE (1000LM) : Quickly slide to the left once

OUTPUT / RUNTIME

MAIN LIGHT CONSTANT MODE		
LOW	200LM	4.5H
MEDIUM	400LM	2.2H
HIGH	800LM	1.5H
MAIN LIGHT + DRL CONSTANT MODE		
LOW	230LM	3.5H
MEDIUM	430LM	2H
HIGH	1000LM	1.3H
DRL MODE		
DRL	30LM	11.5H
FLASH MODE		
NIGHT FLASH	30-800LM	7H
DAY FLASH	0-30LM	38H

*All data are measured in accordance with ANSI/NEMA FL 1-2009. The test was conducted at a temperature of 25°C and a wind speed of 25 km/h. The runtime may vary depending on external temperature and ventilation conditions, and these deviations may affect the result of testing.

LIGHT UNIT CHARGING / BATTERY INDICATOR

Standard charging time approx. 2 hours (5V 1A)

Charging: Flashing red

Fully charged: Constant green

BATTERY INDICATOR

When the light is on, the indicator will display the remaining battery level in real-time.

When the light is off, click the button to display the remaining battery level for 3 seconds.

100%-21%: Constant green

20%-11%: Constant red

10%-1%: Flashing red

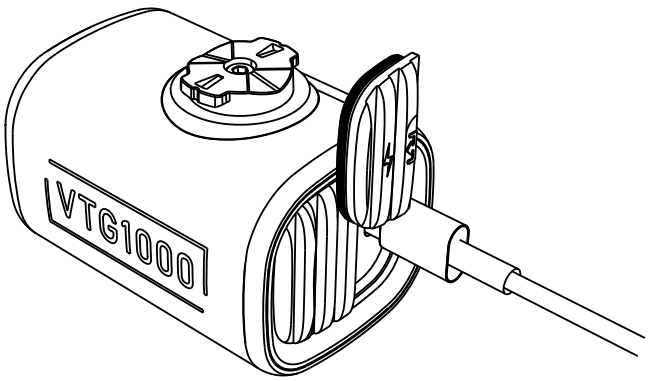

REMOTE CONTROL CHARGING / BATTERY INDICATOR

Standard charging time approx. 1 hour (5V 0.08A)
Charging: Flashing red
Fully charged: Constant green

BATTERY INDICATOR

The indicator on the remote can display the remaining battery level of the light unit and the remote control.
100%-21%: Constant green for 1.5 seconds
20%-11%: Constant red for 1.5 seconds
10%-1%: Flashing red for 6 seconds
Remote 10%-1%, light unit 100%-21%: Constant green for 1.5 seconds, then flashing red for 3 seconds
Remote 10%-1%, light unit 20%-11%: Constant red for 1.5 seconds, then flashing red for 3 seconds

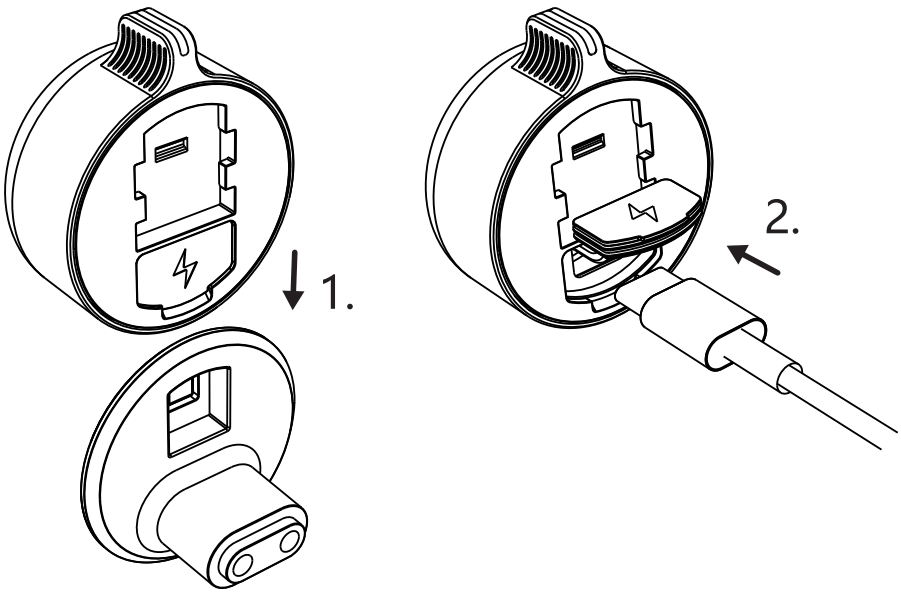

HOW TO INSTALL

1. INSTALL THE FORK MOUNT

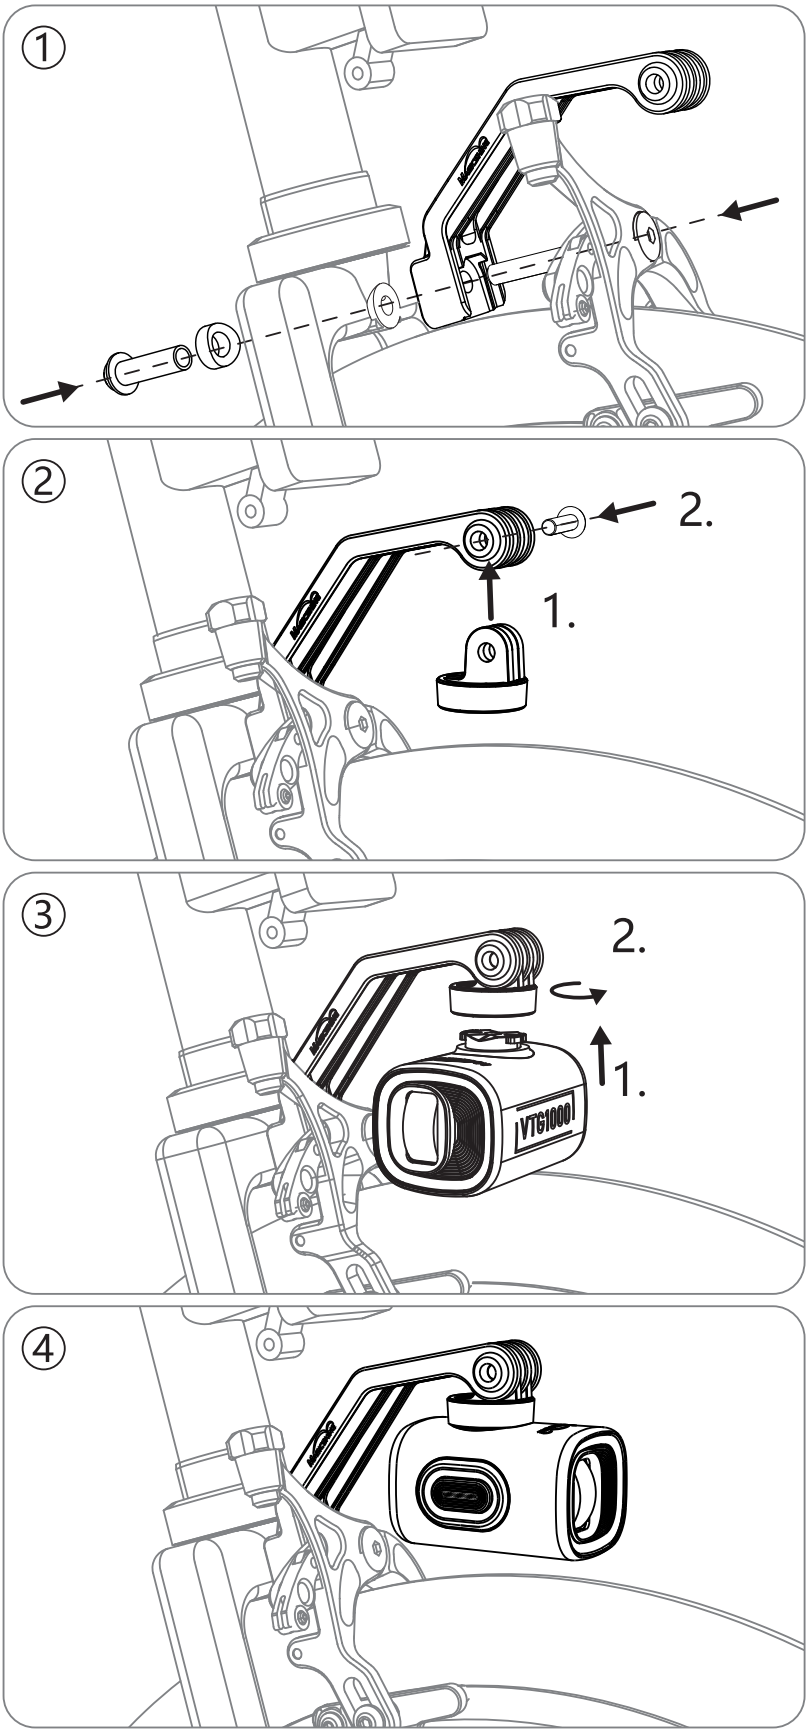

2. REMOTE CONTROL MOUNTING